



WWW.MORETRACTION.COM



EFI-TC2

**TRACTION CONTROL
FOR
Holley® EFI**

**US PATENT 6,577,944
OTHER PATENTS PENDING**

COPYRIGHT NOTICE

Copyright © 1999-2014 Davis Technologies, LLC.

All rights reserved.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders. Any components shown are for illustration or instructional purposes only.

Publication and redistribution of this manual over the Internet or in any other medium without prior written content is expressly forbidden. In all cases this copyright notice must remain intact and unchanged.

Davis Technologies, LLC.

PO Box 8250

Asheville, NC. 28787

(828) 645-1505

email: support@moretraction.com

web: www.MORETRACTION.com

TRADEMARKS

All trademarks used herein are the property of their respective owners.

Holley® is a registered trademark of Holley Performance Products, Inc.

RacePak® is a registered trademark of Competition Systems, Inc.

TABLE OF CONTENTS

TABLE OF CONTENTS	3
INTRODUCTION	5
HOW DOES IT WORK?	6
INSTALLATION	8
SYSTEM OVERVIEW	12
HOLLEY® ECU SETUP	15
DRIVESHAFT SPEED:	16
LOGGING TRACTION CONTROL PARAMETERS:	18
TC ENABLE:	20
TIMING RETARD TABLE:	21
TIMING RATES:	22
OTHER METHODS:	23
TRACTION CONTROL SETUP	24
SETTING THE DIALS:	24
CONFIGURING	26
TRIGGER COUNT:	26
TESTING	27
SENSOR TEST	27
RPM WINDOW TEST:	27
FORCED ACTIVATION TEST:	28
FACTORY RESET	29
FIRMWARE UPDATING	30
APPENDIX A	31
APPENDIX B	32
RING & SENSOR	33
DISCLAIMER	34
NOTES	36
NOTES	37
NOTES	38
CONTACT INFORMATION	39

This Page Left Blank

INTRODUCTION

We would first like to thank you for your purchase of our system. We believe it is the best system available to you on the market today. This system balances effectiveness with ease of installation, broad field of uses, and cost.

As with all technical devices such as engines, shocks, carburetors, clutches etc., the product's performance is based largely on your ability to use it properly. Testing in controlled circumstances will help you determine the proper settings for your application and your situation. Testing is very important since it will help you utilize this product to its full potential.

Please read all of the instructions and information thoroughly before attempting to install or use this product.

FOR RACING PURPOSES and OFF ROAD USE ONLY!

HOW DOES IT WORK?

The *Non Self-Learning* systems, like our EFI-TC1 series, periodically compares the rate of acceleration of the driveshaft to an Adjustable Fixed Rate (AFR), known as Threshold. If the DS RPM rate of change is in excess of that Threshold, then a correction is made. The comparison is made every 1/8 of a turn of the driveshaft.

Basically, this [Patented](#) system looks for spikes in DS RPM that are caused by wheel slip. If these spikes are large enough, then a correction is made, reducing the slip.

By adjusting the Threshold, the user can tune the system to correct larger slips, while not reacting to smaller, harmless, slips. This means the user does not have to figure out the desired DS/Engine RPM and build a preset “Dot Plot” (anybody got a crystal ball?).

A typical 1/8th mile car turns the drive shaft about 300 times in a 660 ft. run. At 8 triggers per rev, that would be like building a “Dot Plot” w/ 2400 dots, and ¼ mile cars turn the drive shaft about 550-600 times in 1320 ft. run. At 8 triggers per rev, that would be 4400-4800 dots.

[Self-Learning](#) systems, such as our EFI-TC2, compare the rate of acceleration of the drive shaft to a calculated threshold value that is constantly updated based on the average of the previous measurements. This update occurs on every drive shaft revolution. So, if the last 1/8 of a turn of the drive shaft is faster than the average of the last full

revolution, then a slip is detected. Through this very advanced Patented process, the system constantly accounts for track conditions, tire condition, etc. to constantly update the internal settings. These settings are updated as many as 800 times a second to keep the unit calibrated to exactly the right settings regardless of changing conditions.

Basically, the system learns the average rate of acceleration of the drive shaft, and if there is a sudden spike in RPM above that learned rate, then a correction is made. With the Self-Learning feature, the user doesn't have to try to figure out the DS RPM rate of change and set a "Threshold", the system does it for you, every drive shaft revolution!

The user does have an adjustment referred to as "Mode" that sets the overall sensitivity of the system to make a correction based the extent of the tire slip. By adjusting the Mode, the user can tune the system to correct larger slips, while not reacting to smaller, harmless, slips.

This system is not simply a few lines of code added to an existing fuel injection or ignition system, and called traction control. This system utilizes a patented method and multiple high speed processors to very accurately and effectively monitor rates of acceleration to determine wheel speed, and tire slip. In fact, Davis Technologies' systems are at least 20 times faster than other systems which are integrated into the fuel injection or ignition system.

Our systems only job is Traction Control!

INSTALLATION

Installation of the system is very simple. It is very important to make all connections correctly. Improper installation could result in poor system performance or damage to the system.

Keep all wires away from any spark plug wires and coils or other sources of electrical noise and heat.

The unit should be mounted away from any sources of electrical noise or high heat.

It is recommended to connect the power and ground leads for the traction control directly to the ECU when possible to reduce electrical noise issues.

The ECU has pins dedicated to supply 12v positive and ground. Do not share these if already used by another sensor or system. The dedicated pins are listed in the table below.

Power Pins				
HP			Dominator	
Connector	Pin		Connector	Pin
J1	B20		J1	B20
			J2	B20

Ground Pins				
HP			Dominator	
Connector	Pin		Connector	Pin
J1	B14		J1	B14
			J2	A18
			J2	A22
			J2	B14
			J3	B1
			J3	B16
			J4	B14

If a 12v output is not available, you can configure a 12v output in the I/O ICF. Set the "Type" to "+12v". Configure this output to come on using a "Sensor Input Trigger" such as "RPM Above 100 RPM", or "Battery Above 8 Volts". This will provide a 12v source under these conditions.

Make the connections as follows:

6 Pin Square Connector (P1)

- 1. Connect pin 1 (RED wire) to 12v positive.**
- 2. Connect pin 2 (BLACK wire) to ground.**
- 3. Connect pin 4 (BLUE wire) to supply voltage for optional output on pin 3 below. Must be 5-20 volts positive source.**
- 4. Connect pin 3 (PINK wire) to optional LED light or data system. Output is supply voltage as supplied by pin 4 anytime TC is active. 5 AMP Max. Many users connect this output to an LED tail light.**

6 Pin Flat Connector (P2)

- 1. Connect pin 1 (YELLOW wire) to any “F Type” input pin on the Holley® ECU. This is the “T.C. Input” as defined in the Holley EFI in the traction control ICF. When slip is detected, a signal is sent to the Holley ECU.**
- 2. Connect pin 6 (WHITE wire) to the signal wire from the drive shaft sensor. This is the white wire on sensors supplied by Davis Technologies. For other sensors, please refer to manufactures instructions. (See Appendix A)**
- 3. Connect pin 5 (ORANGE wire) to any “F Type”**

input pin on the Holley® ECU and configure for Drive Shaft speed. This is required to properly utilize the multiple correction levels (See Tuning Section later in this manual). May also be connected to data system Drive Shaft RPM input if required. Output is the same as the input on pin 6 above.

Holley EFI ECU Pin Map

View Inputs View LCD View Outputs View Injectors View

UNASSIGNED INPUTS

CONNECTOR J1


Pin	Input Number	Input Type
A12	Input #1	H ECU Log Trig ,Master Enable,T.C. Enable
A3	Input #2	H T-Brake/Launch
A13	Input #3	F DRIVEHAFT SPEED
A4	Input #4	F T.C. Input

CONNECTOR J2


Pin	Input Number	Input Type
A10	Input #5	5 2 T H G
A1	Input #5	5 2 T H G

SYSTEM OVERVIEW


OPTIONAL LED TAIL LIGHT

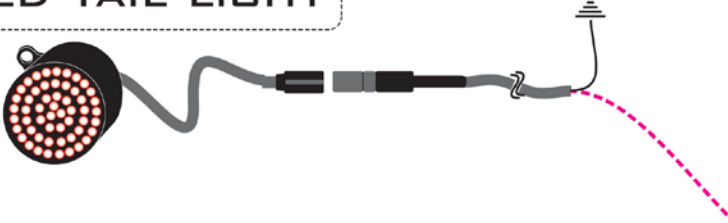


OPTIONAL DATA LOGGER

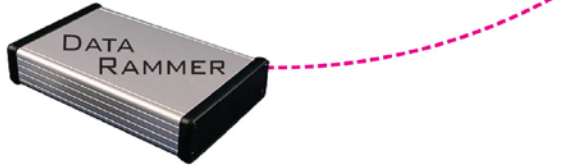

OPTIONAL DAVIS TECHNOLOGIES 8 TRIGGER RING & HIGH SPEED SENSOR

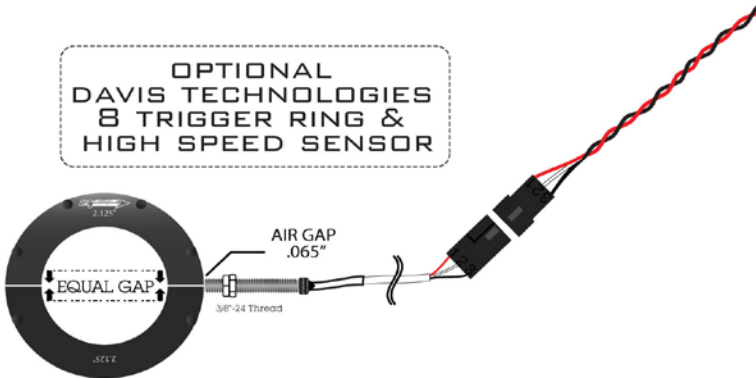


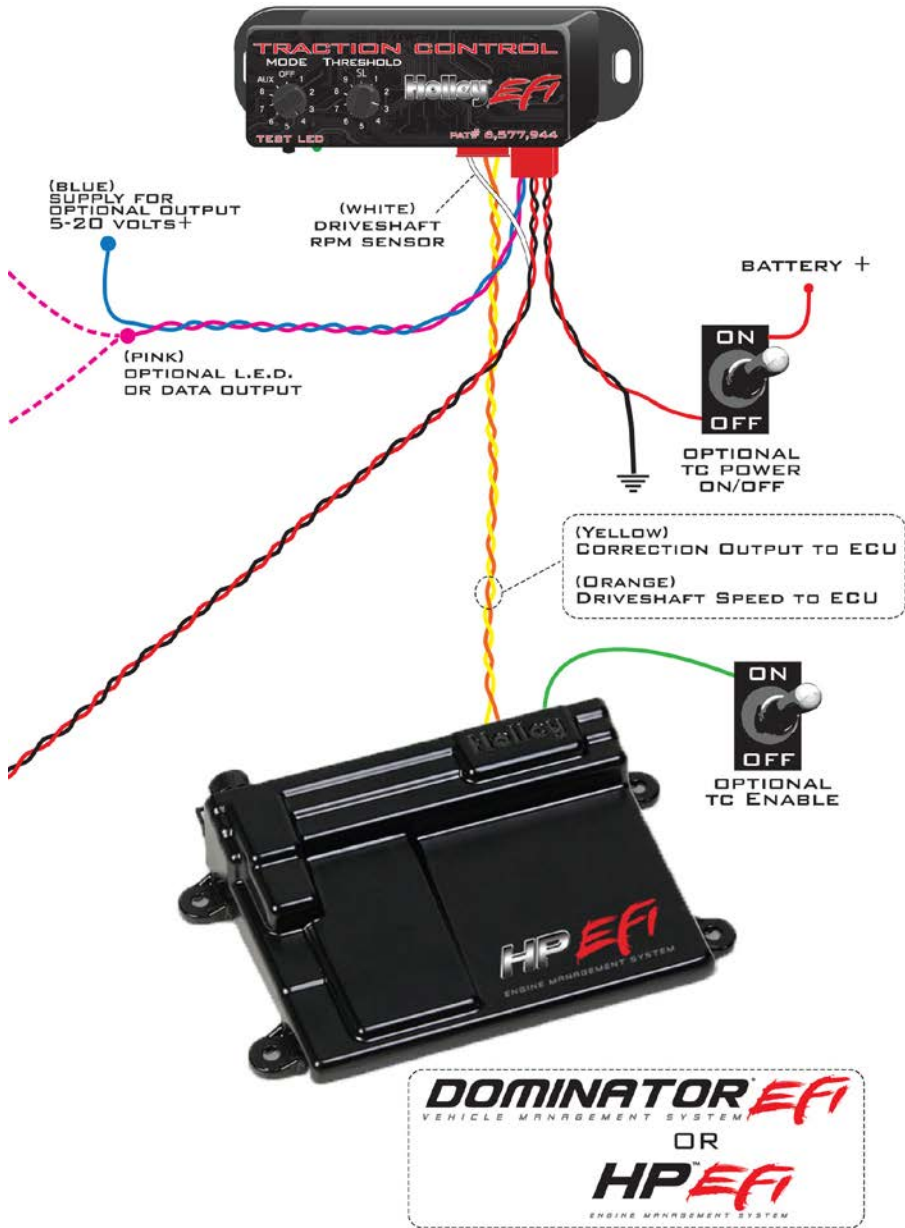

This Page Left Blank

HOLLEY® ECU SETUP

The Holley® EFI must be configured to allow the Traction Control signals to cause a reduction in power. This can be done using an Ignition Timing Retard, A reduction of Boost, a reduction of the amount of Nitrous delivered or even by reducing the throttle opening on systems equipped with Drive By Wire Throttle.

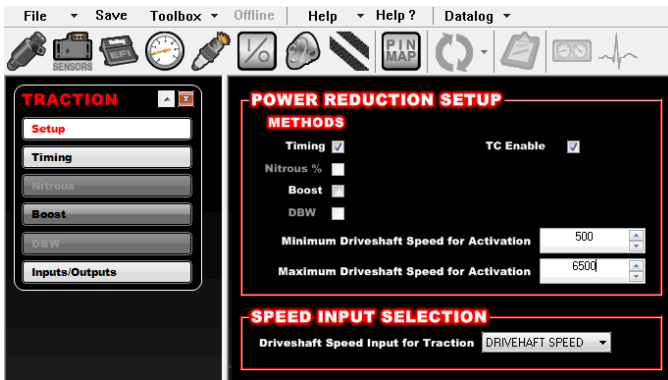


Minimum Driveshaft Speed is a user adjustable setting that allows the racer to set the point at which the unit Begins making corrections. If the Starting RPM is set to 500 RPM, then the unit is active and monitoring the acceleration, but not making any corrections until the Minimum Driveshaft Speed of 500 RPM is reached. This may be useful to prevent the Traction Control from interfering with an already established launch setup.

Maximum Driveshaft Speed is a user adjustable setting that allows the racer to set the point at which the unit Stops making corrections. Some users may want the unit to stop at a certain RPM while others may want the unit to be able to make corrections for the entire run.

DRIVESHAFT SPEED:

The orange wire from P2 on the TC unit can also be used for the “Driveshaft Speed Input for Traction”. This needs to be set up in the I/O ICF first and then selected in the Traction Control ICF. Other shaft speed inputs can be configured and used, but the simplest method is to just pull it from pin 5 on the TC connector P2.

To set up the driveshaft speed input, create a “Digital Speed” input in the I/O ICF.

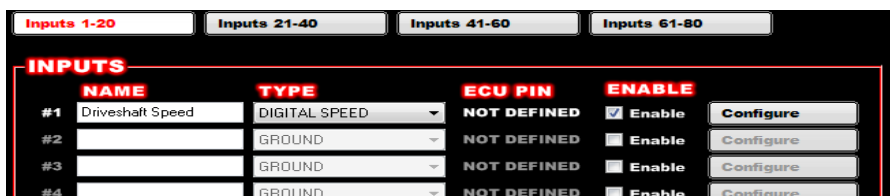

The screenshot shows a software interface for configuring inputs. At the top, there are four tabs: 'Inputs 1-20', 'Inputs 21-40', 'Inputs 41-60', and 'Inputs 61-80'. Below the tabs is a table titled 'INPUTS' with the following columns: NAME, TYPE, ECU PIN, ENABLE, and a 'Configure' button. The table contains four rows of input configurations.

	NAME	TYPE	ECU PIN	ENABLE	
#1	Driveshaft Speed	DIGITAL SPEED	NOT DEFINED	<input checked="" type="checkbox"/> Enable	Configure
#2		GROUND	NOT DEFINED	<input type="checkbox"/> Enable	Configure
#3		GROUND	NOT DEFINED	<input type="checkbox"/> Enable	Configure
#4		GROUND	NOT DEFINED	<input type="checkbox"/> Enable	Configure

Next, select the “Configure Tab. If using the orange wire from TC pin 5 P2, configure it as follows:

Type = RPM (this will be the driveshaft speed)

Display – See example below. If RPM exceed 10,000, then increase the values as needed.

Pulses – Set to 8 (pulses per rotation) if using a Davis Technologies 8 trigger ring. If not set to whatever the magnet count is on the collar used.

Pulses to Average – Set to 4 as a baseline. If the Shaft Speed is too “jumpy” on the Holley EFI, this can be increased.

Example Driveshaft Speed Setup

Driveshaft Speed - DIGITAL SPEED

Type: RPM

Units: rpm

Format: 1

Sensor Min: 0 rpm

Display Min: 0 rpm

Caution Min: 0 rpm

Normal Min: 0 rpm

Sensor Max: 99999 rpm

Display Max: 10000 rpm

Caution Max: 10000 rpm

Normal Max: 10000 rpm

Enable PC/LCD Caution Output

Enable Switched Caution Output

Enable PC/LCD Warning Output

Enable Switched Warning Output


Pulses to Average: 4

Pulses: 8 pprot

LOGGING TRACTION CONTROL PARAMETERS:

Most of the Holley traction control data can be logged and reviewed. To do this, these channels must be set up as “Internal Parameters”. This must be done in the I/O ICF. Contact Holley or review Holley V2 software for more information. The following is a brief setup example.

First create a new input. In the dropdown select the “INTERNAL” selection.

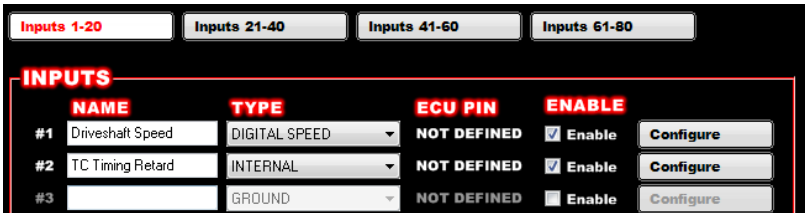

The screenshot shows a software interface for configuring inputs. At the top, there are four tabs: "Inputs 1-20", "Inputs 21-40", "Inputs 41-60", and "Inputs 61-80". Below the tabs is a section titled "INPUTS" containing a table with the following columns: NAME, TYPE, ECU PIN, and ENABLE. There are three rows of input channels, each with a "Configure" button.

	NAME	TYPE	ECU PIN	ENABLE	
#1	Driveshaft Speed	DIGITAL SPEED	NOT DEFINED	<input checked="" type="checkbox"/> Enable	Configure
#2	TC Timing Retard	INTERNAL	NOT DEFINED	<input checked="" type="checkbox"/> Enable	Configure
#3		GROUND	NOT DEFINED	<input type="checkbox"/> Enable	Configure

Next, go into “Configure”. Select the “Source” for the channel you want to use (see picture below). At the bottom of the list there are many traction control channels. They all start with “TC”. They are self explanatory. You don’t “Pin Map” these. You can select them to be viewed in the Data Monitor, or in the Data Logger.

Example TC Timing Retard Logging Setup

TC Timing Retard - INTERNAL

Source: TC_Timing_Retard

Units: °

Format: 1.23

Sensor Min: 0.00 °

Display Min: 0.00 °

Caution Min: 0.00 °


Normal Min: 0.00 °

Sensor Max: 60.00 °

Display Max: 60.00 °

Caution Max: 60.00 °

Normal Max: 60.00 °



Enable PC/LCD Caution Output

Enable Switched Caution Output

Enable PC/LCD Warning Output

Enable Switched Warning Output

Warning Enabled Timing Offset: 0


TC ENABLE:

The TC Enable feature allows the user to configure a pin to enable / disable the traction control with a remote toggle switch. This toggle switch can be the same as used to enable data logging and assigned to the same pin as the data log enable in the pin map. If a separate pin is desired, simply pin map it to a type “H” or “G” pin per normal Holley pin assignment. **This must be a “Constant On” switch, not a momentary push button!**

NOTE: Leave the TC Enable check box unchecked to activate the TC if a remote switch is not used.

Some users like to disable the TC during the burnout, however this is not necessary as the TC will only make correction when a spike in RPM is detected. In the burnout, the TC will only activate on the initial “Hit” and on gear shifts. It will not cut power for the duration of the burnout.

Example of Pin Map for TC Enable

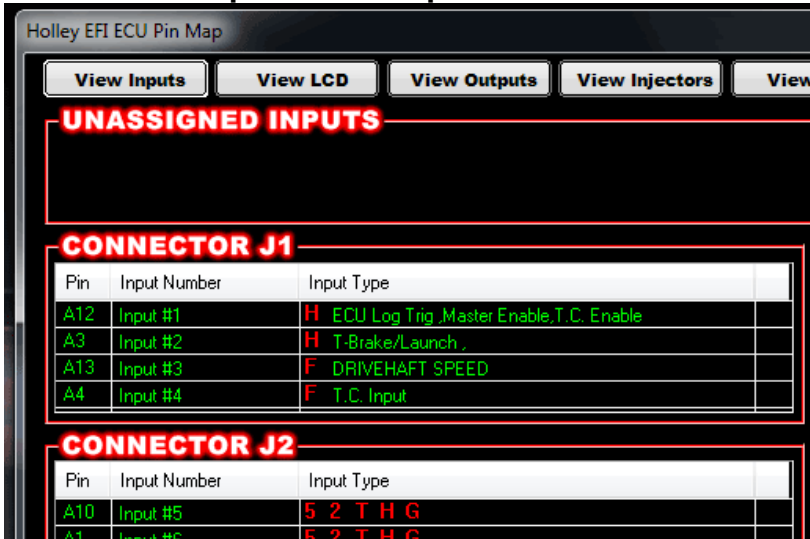

Holley EFI ECU Pin Map

View Inputs View LCD View Outputs View Injectors View

UNASSIGNED INPUTS

CONNECTOR J1

Pin	Input Number	Input Type
A12	Input #1	H ECU Log Trig_Master Enable, T.C. Enable
A3	Input #2	H T-Brake/Launch
A13	Input #3	F DRIVEHAFT SPEED
A4	Input #4	F T.C. Input

CONNECTOR J2


Pin	Input Number	Input Type
A10	Input #5	5 2 T H G
A1	Input #6	5 2 T H G

TIMING RETARD TABLE:

The most common method to reduce power is Timing Retard, which we will use for this example.

Here is a basic retard table that will retard 2.5 degrees of timing for a small spin, and 5 degrees for a larger spin. When a “small” slip indication occurs, the timing will immediately step to the corresponding “small” retard value. When a “large” slip indication occurs, the timing will immediately step to the corresponding “Large” retard value. If a large or small slip indication remains, the timing will retard at a rate based on the “Removal” rate until the “Maximum” retard value is met (see Timing Rates below). In the event that repeated large corrections do not correct the tire slip, then the system will make a Maximum correction of 8 degrees.

The user can set the values to whatever amount of timing retard is desired, and even change it throughout the run depending on Drive Shaft speed.

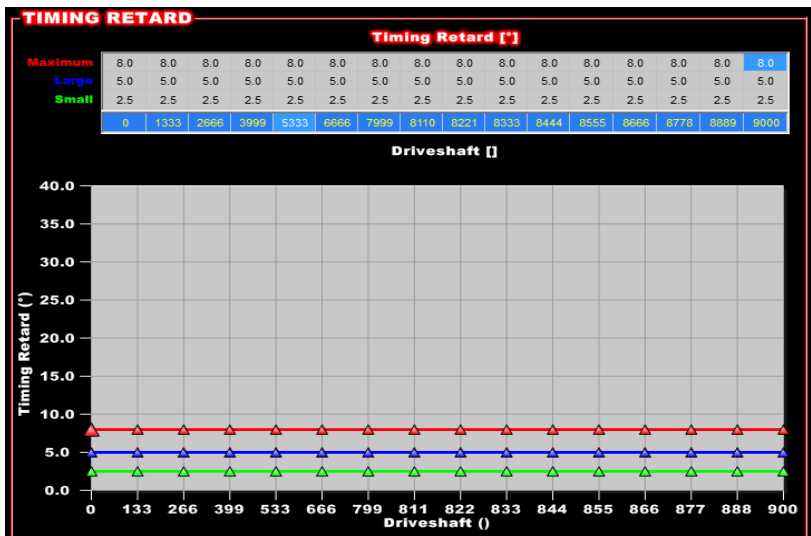

TIMING RATES:

The rate at which the timing is removed from, and restored back to the base timing map is also adjustable.

		Timing [°/sec]															
Removal	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9	99.9
Restore	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
	0	1333	2666	3999	5333	6666	7999	8110	8221	8333	8444	8555	8666	8778	8889	9000	

The Removal rate is how fast the timing is removed towards the “Maximum” retard, after the TC makes a correction of the small or large value. A value of 15-25 is likely a good starting point. So a Removal Rate of 15 degrees per second is 1.5 degrees in 1/10th of a second. A setting of 25 in the Removal table would result in the timing being retarded faster, at a rate of 2.5 degrees in 1/10th of a second.

The Restore Rate is used to “Ramp” the timing back in after a slip has been corrected. As a rule of thumb, 2.5 degrees per 1/10th of a second is good. So a Restore Rate of 25 degrees per second is 2.5 degrees in 1/10th of a second. A setting of 50 in the Restore table would result in the timing being restored faster, at a rate of 5 degrees in 1/10th of a second.

OTHER METHODS:

In addition to Timing Retard, Nitrous Percentage, Boost Level, and Drive By Wire throttle body reductions can occur to reduce power. These can be selected in the Setup Menu. Any combination of them can be used. The methodology is the same as that used in the Timing Retard example above.



TRACTION CONTROL SETUP

Different tracks, cars, conditions, etc. may require different settings for the system to function effectively. The dials on the unit are used for these settings. The values are referred to as Threshold, and Mode.

The EFI-TC2 incorporates two different methods to control wheel spin.

Davis Technologies' patented Self Learning systems have the ability to learn the rate of acceleration that the vehicle is achieving on average, in real time, and activate the outputs if this learned average is exceeded.

The "Self Learning" method preferred by most users.

The second patented method is a less advanced system, where the users sets a maximum rate of acceleration that if exceeded will cause the outputs to be triggered.

SETTING THE DIALS:

The Self Learning system is activated when the "Threshold" dial is set to "SL". The "Mode" dial is then used to tune the sensitivity of the system. The higher the number the more sensitive the system is. A good starting point is Mode 3. If you feel that your system is making too many corrections while set to Mode 3, then try Mode 2. Valid settings for Mode are 1-8.

The second- Non-Self Learning system is activated when the “Threshold” dial is set to a value of 1-8. This method simply sets the maximum rate of acceleration allowed. If this rate is exceeded then a correction is made. The higher the number the more aggressive the system is. A good starting point is Threshold 3. If you feel that your system is making too many corrections while set to Threshold 3, then try Threshold 2. Valid settings for Threshold are 1-8.

(When using this method the Mode setting has no effect on the system, with the exception of Mode OFF, or Mode AUX).

(OFF turns unit off, except for sensor test / AUX activates window RPM test).



CONFIGURING

TRIGGER COUNT:

The unit is factory set for 8 triggers per revolution.

The unit can be configured to use between 4 – 16 triggers per revolution. Davis Technologies recommends 8 triggers per revolution.

Once the value is set, the value will remain until changed by the user.

To change the value, follow these steps.

1. Set the Mode dial to “4”
2. Hold down the “Test” button
3. Turn the power On
4. While holding the “Test” button down, move the Mode dial to the desired number of triggers divided by two. (example- 8 triggers/2=4)
5. Release the “Test” button.

The LED will flash to show the number of triggers the unit is now set to. **(The Trigger Count must be set correctly for the accurate RPM calculations)**

TESTING

After installation it is recommended that you test the system. To do so please follow these instructions step by step.

SENSOR TEST:

This test is useful for setting up the trigger ring and sensor if used.

1. Set the dial to “OFF”
2. Rotate the RPM trigger-

The LED will flash each time a trigger is sensed. The unit is not active in any other way and no corrections will be made. The LED will appear to glow if triggered quickly.

RPM WINDOW TEST:

This mode is useful to check that the system is reading the RPM signal properly and activating the retard stages.

1. Set the dial to “9”
2. Start the engine and accelerate the driveline.
3. When the RPM is within the window of 1000 to 3000 rpm the LED will glow solid and the unit will make a large correction.

FORCED ACTIVATION TEST:

This test is useful to check both stages of retard.

This is also useful to test the connections to a data system if used.

1. Set the dial to any setting between 1 to 7.
2. Connect a timing light to the engine
3. Turn “on” the power to the unit, the LED should begin to flash.
4. Start the engine.
5. With the engine idled up to about 3500 rpm; press the Test button on the unit until the LED glows solid. The first correction level will activate for 4 seconds, then the second stage for the next 4 seconds.

IMPORTANT- The Minimum Driveshaft Speed Must Be Exceeded For The Timing To Retard. You may want to temporarily set the Minimum Driveshaft Speed to 0 rpm for this test. (see Holley ECU Setup above)

Note: After the test is complete, the LED will blink to show the firmware version.

If unit does not pass all tests, recheck all setup parameters and connections and retest.

FACTORY RESET

All TC settings can be restored to **Factory Defaults** at any time by following these steps.

1. Set the dial to “5”
2. Hold down the “Test” button
3. Turn the power On
4. While holding the “Test” button down, move the dial to the “Off” position.
5. Release the “Test” button,

The LED will flash rapidly to indicate the Factory Settings have been restored.


FIRMWARE UPDATING

Davis Technologies may release firmware updates or upgrades periodically to ensure the best possible functionality of the Traction Control System. These are typically installed using the USB connector and the supplied USB cable. Instructions for this procedure will be included in the firmware update file located on the web site.

Users should log onto www.moretraction.com occasionally to check for updates.

APPENDIX A

RacePak® Sensor Pin Out

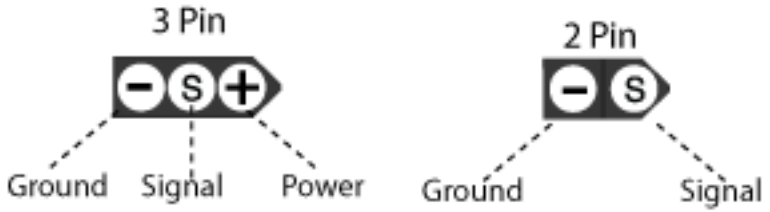

APPENDIX B

The biggest difference in our systems is the Speed and the Self-Learning capabilities. Other systems “brag” that their TC works 10 times a second—our older systems worked 20 times a second, and while it would help “save a run”, it just was not fast enough to help you go faster.

The new systems (since Jan 2009) work every 1/8th of a turn of the driveshaft. At 3000 RPM DS speed, a very critical area for tire slip, it measures the DS RPM 400 times a second, at 6000 DS RPM it measures 800 times a second! The system then processes those measurements 50 times a second (typically), and as fast as 100 times a second, to calculate acceleration change (DS RPM Delta). (We can actually use up to 30 triggers, which would be 1500 times a second at 3000 DS RPM, and 3000 times a second at 6000 DS RPM !!)


Our units utilize 2 high speed processors to measure and calculate drive shaft data, and nothing else. Our patented systems are not simply a few lines of code thrown into an existing engine management system and called traction control. This is all we do, and all we have done for the past 14 years!

Traction Control Is What We Do!

RING & SENSOR

Use the following guidelines to install the Davis Technologies ring & sensor.

!!!! Set Gap to .065" !!!!

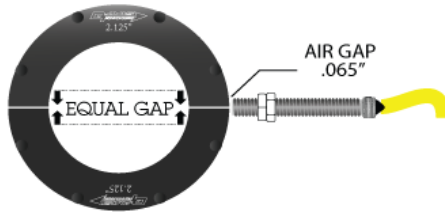

!!!! DO NOT OVERTIGHTEN
SENSOR JAM-NUTS !!!!

DISCLAIMER

FOR RACING PURPOSES and OFF ROAD USE ONLY!

Vehicle racing is an inherently dangerous sport with significant risk of personal injury or even death. When a user participates in vehicle racing and/or track events, he accepts the risk inherent therein. Davis Technologies LLC ("DAVIS"), its employees, and affiliates makes no warranty that the use of its products or parts guarantees personal safety or freedom from physical injury or operates as a life saving device.

Davis Technologies LLC's ("DAVIS") PRODUCTS AND PARTS ARE SOLD "AS IS" WITHOUT ANY WARRANTY WHATSOEVER. EXPRESS WARRANTIES, IMPLIED WARRANTIES, WARRANTIES OF MERCHANTABILITY AND WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. THE ENTIRE RISK OF QUALITY AND PERFORMANCE OF SUCH PRODUCTS AND PARTS IS WITH THE BUYER, USER, SUBSEQUENT USER, OR AGENT THEREOF (HEREIN "USER"). SHOULD SUCH PRODUCTS OR PARTS PROVE DEFECTIVE FOLLOWING THEIR PURCHASE, THE BUYER AND NOT THE MANUFACTURER(S), DISTRIBUTOR(S), OR RETAILER(S), ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICES OR REPAIR AS RESULT OF A PART(S) FAILING.

Davis Technologies LLC ("DAVIS") disclaims all liability for any special, direct, incidental or consequential damages, or any damages whatsoever, including, without limitation, the loss of life or limb, or damages due to bodily or personal injury, which may arise or result from the sale, installation, or use of any of its products and parts.

It is the user's responsibility to inspect and verify the dimensions, specifications, and performance of all products and parts as being appropriate for the use to which the user will put them prior to any actual installation and/or use of said products and parts.

Davis Technologies LLC's ("DAVIS") products and parts are to be inspected by the user before each use for evidence of damage, defect or wear. Any deviation by the user from the manufacturer's specifications concerning use, maintenance, repair, alterations and modifications constitutes willful negligence.

The installation of Davis Technologies LLC's ("DAVIS") products or parts may adversely affect other vehicle components, safety equipment or manufactured goods (collectively "goods"). Davis Technologies LLC ("DAVIS") assumes no responsibility for any damage to other goods, or bodily injury that may arise due to failure of other goods, due to installation and/or use, either proper or improper, of its products or parts.

The liability of Davis Technologies LLC ("DAVIS") is limited to the replacement of defective products or parts found under examination by manufacturer to be defective in material or workmanship within 60 days after purchase, and which has not been caused by an accident, improper use, alteration, tampering, excessive use, misuse,

modification or abuse. The damage of the user shall be deemed liquidated in the costs of replacement of the product or part.

Davis Technologies LLC's ("DAVIS") assumes no responsibility for errors, omissions, diagrams, pictures, illustrations or text in these instructions or the documents contained herewith.

By purchasing or using this product, the user agrees that if any provision of this Disclaimer is held to be illegal, invalid or unenforceable under present or future law, such provision shall be fully severed from the Disclaimer and this Disclaimer shall be construed and enforced as if such illegal, invalid or unenforceable provision never comprised a part hereof, and the remaining provisions hereof shall remain in full force and effect and shall not be affected by the illegal, invalid or unenforceable provision, there shall be added automatically as part of this Disclaimer a provision as similar in its terms to such illegal, invalid or unenforceable provision as may be possible and be legal, valid and enforceable.

CONTACT INFORMATION

Technical support and sales may be reached at:

DAVIS TECHNOLOGIES, LLC.

PO Box 8250

Asheville, NC. 28787

(828) 645-1505

(828) 645-1525 fax

email: support@moretraction.com

web: www.MORETRACTION.com

Holley® information may be obtained from:

HOLLEY PERFORMANCE PRODUCTS, INC.

1801 Russellville Rd.

Bowling Green, KY 42101

270 782-2900 (Tel)

270 781-9940 (Fax)

270 782-2900 (Custom Shop)

270 781-9741 (Tech Service)

270 781-9772 (Fax: Tech Service)

web: www.holley.com





WWW.MORETRACTION.COM