PFEFI

PROFILER EFI MODULE




BASIC INSTALL





Notes

- Trans Brake and arm switch can optionally be connected to ground source
- Pins 11, 13, 14 connect to any White input, configure in FT manager
- Connect power and ground to same source as ECU
- Pins 2,3,7,9,10,12 for optional/ future use
- Pin 12 use to trigger other devices on launch (750mA Pos-Neg)

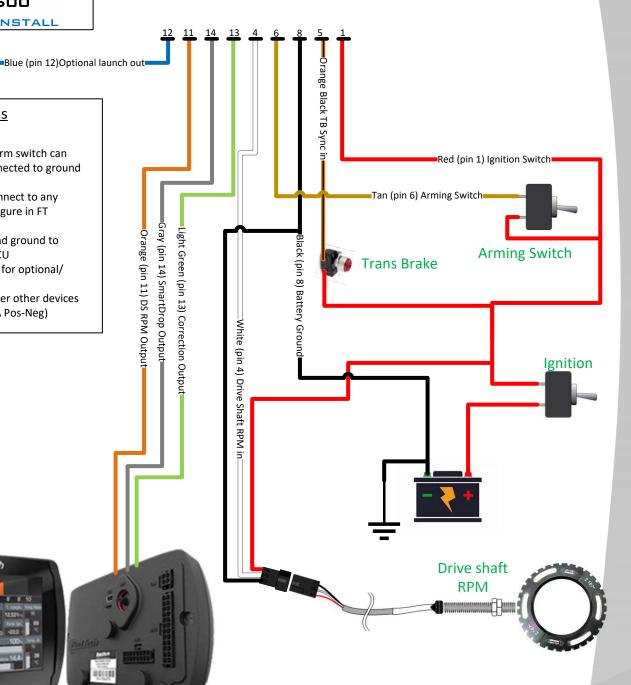



Connect to any White Input. Configure in FT Manager



PFEFI

PROFILER EFI MODULE




14 13 12 11 10 9



BASIC INSTALL

Notes

- Trans Brake and arm switch can optionally be connected to ground
- Pins 11, 13, 14 connect to any White input, configure in FT manager
- Connect power and ground to same source as ECU
- Pins 2,3,7,9,10,12 for optional/ future use
- Pin 12 use to trigger other devices on launch (750mA Pos-Neg)

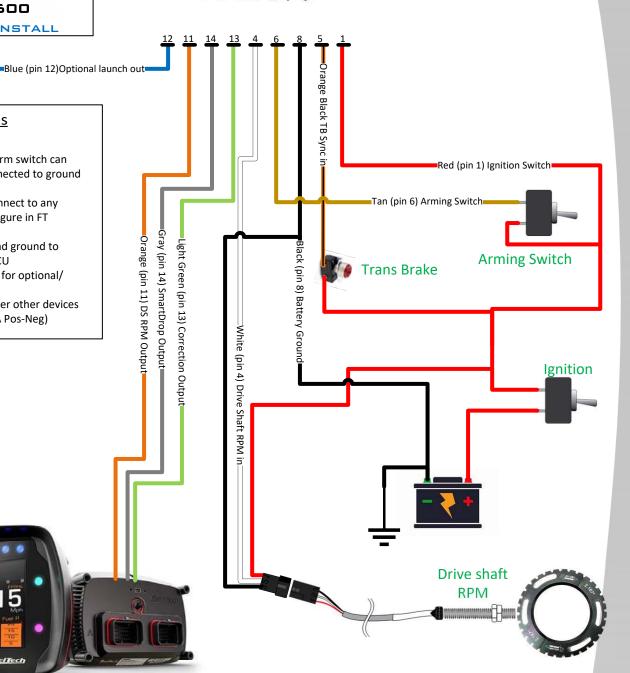

Connect to any White Input. Configure in FT Manager

