


PROFILER

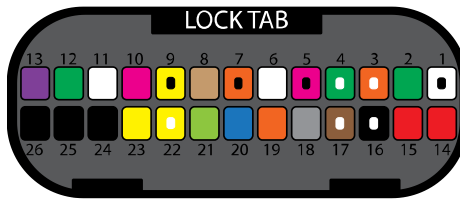


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

Notes

- Trans Brake and arm switch can optionally be connected to ground source
- Pins 18,19,21 connect to any White input, configure in FT manager
- Connect power and ground to same source as ECU
- Unlisted Pins for optional/future use
- Pin 20 use to trigger other devices on launch (750mA Pos-Neg)

Connect to any White Input. Configure in FT Manager

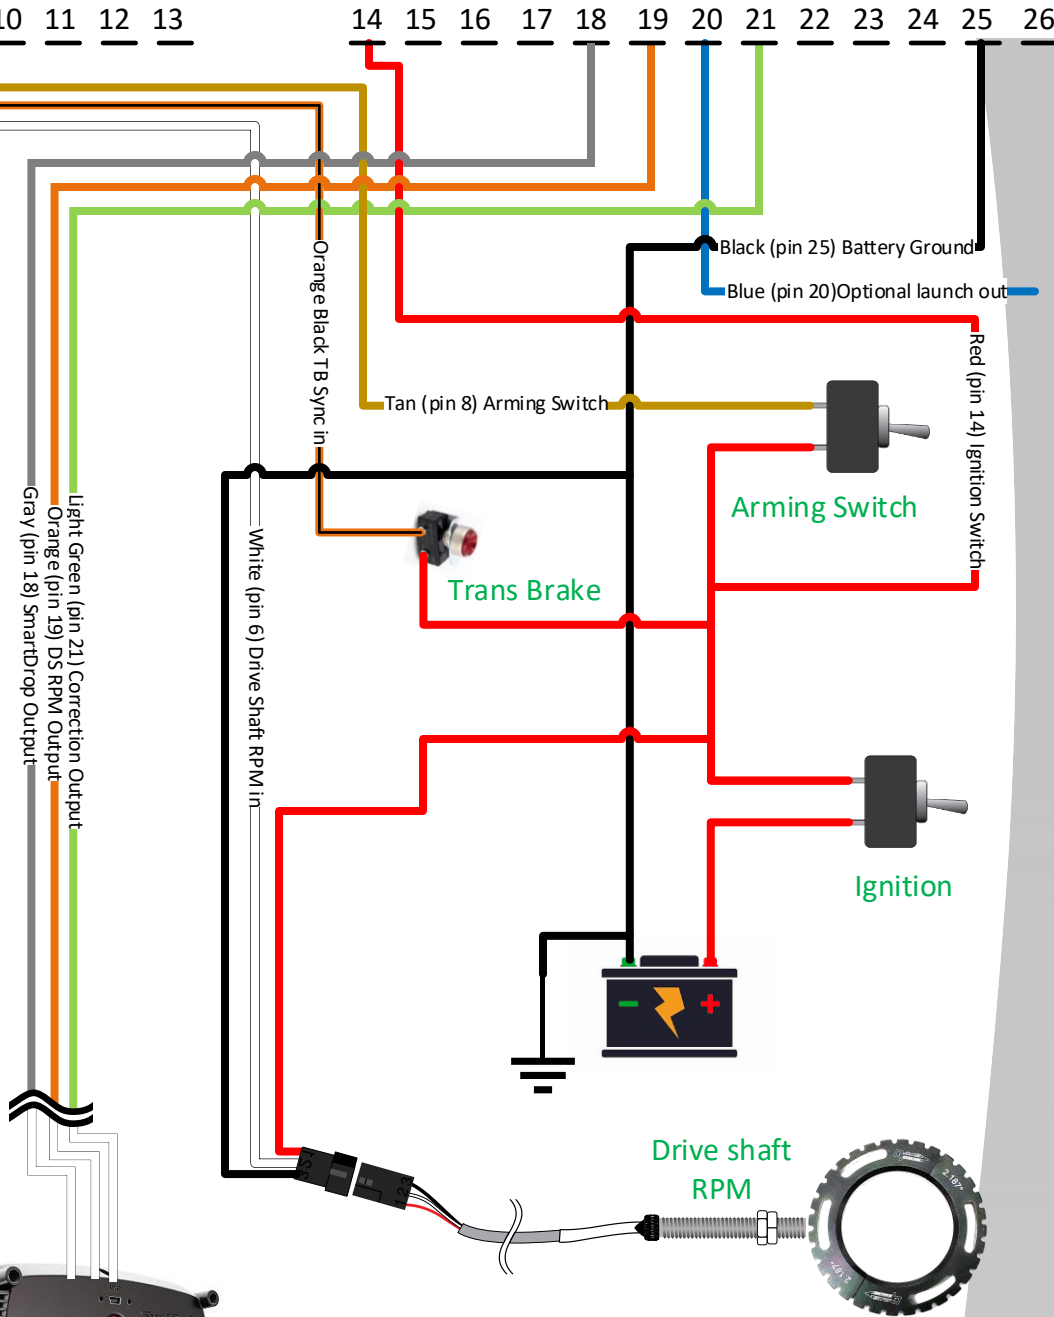

WWW.MORETRACTION.COM

Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders. Any components shown are for illustration or instructional purposes only.