


# PROFILER

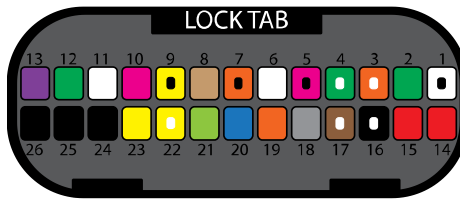


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

### Notes

- Trans Brake and arm switch can optionally be connected to ground source
- Pins 18,19,21 connect to any White input, configure in FT manager
- Connect power and ground to same source as ECU
- Unlisted Pins for optional/future use
- Pin 20 use to trigger other devices on launch (750mA Pos-Neg)

Connect to any White Input. Configure in FT Manager

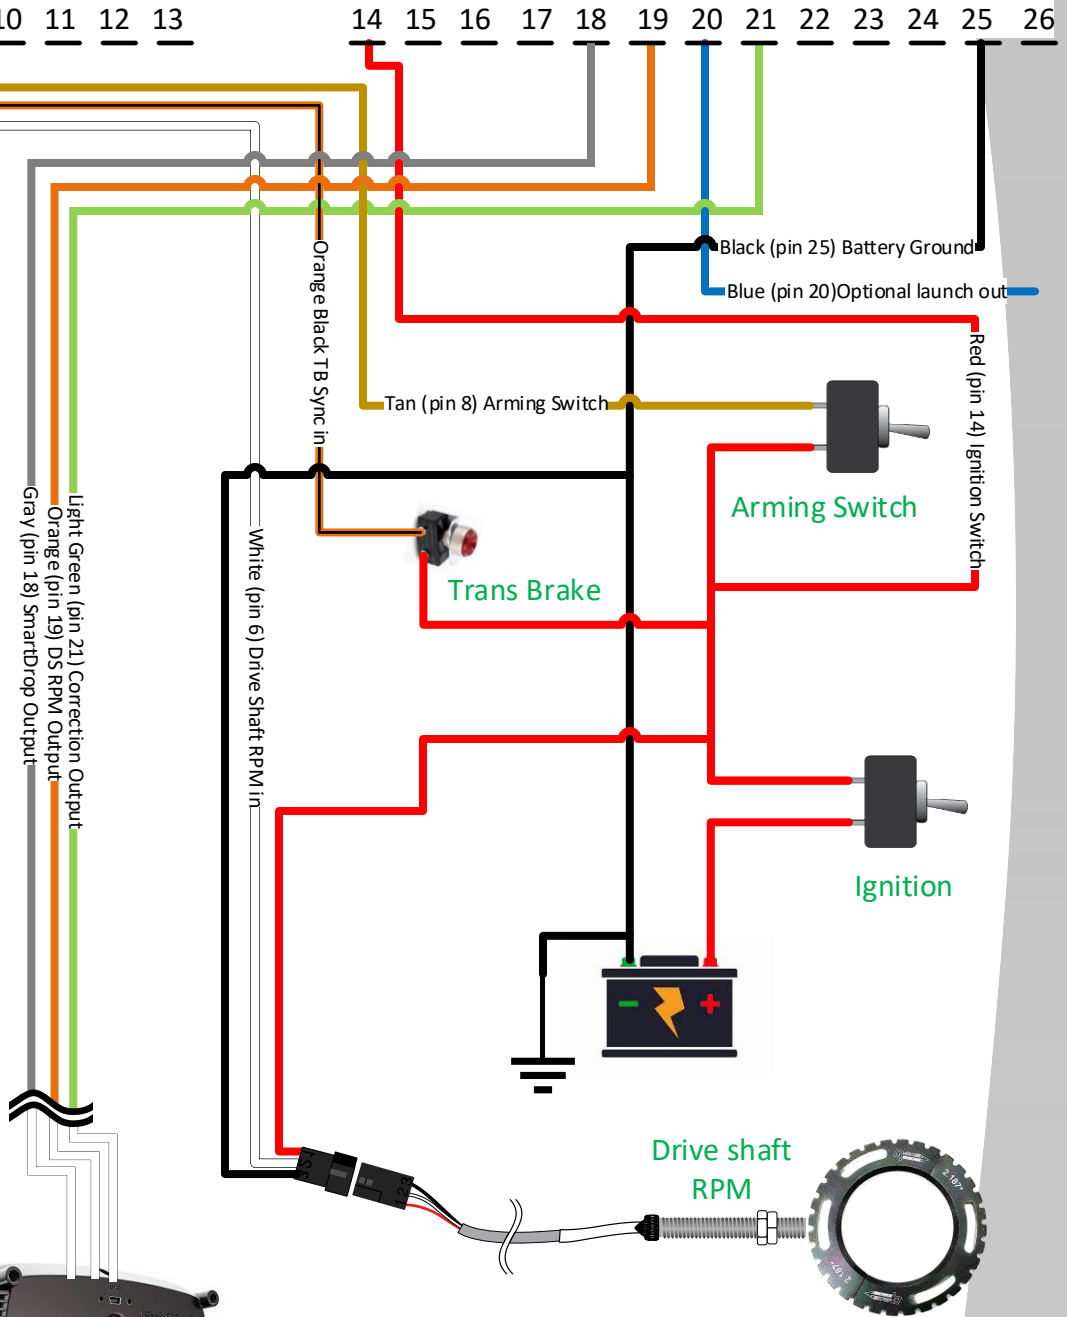

[WWW.MORETRACTION.COM](http://WWW.MORETRACTION.COM)

Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders. Any components shown are for illustration or instructional purposes only.